


Assembly Instructions



Kit includes: Base, telescopic pole /support arms and bottom rail.



Remove cap and fill the base with water or sand.

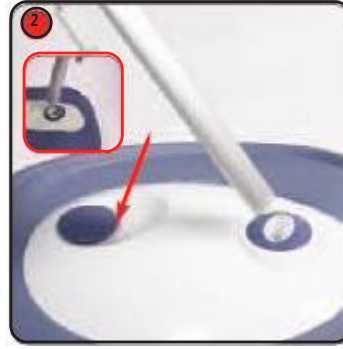

Insert the telescopic pole set into the base.



Open out the banner support arms.



Attach the top graphic eyelets to the support arm hooks.



Release catch, then raise the pole to the desired height.



Snap the catch closed to lock pole in position



Unlock the telescopic bottom rail by lifting up the lever.



Extend the bottom rail to suit the graphic width.



Push down on the lever to lock the rail into place



Attach the bottom graphic eyelets to the rail hooks.



Slide the rail stay cord to the centre of the base.



If necessary adjust the telescopic pole to add tension to the graphic.

