


Digital Totem Display Instructions

Transportation



Removing from pallet

- It is recommended to remove the totem from the pallet by a minimum of TWO persons, holding the totem at both sides, tilting it in alternate directions to walk it off the pallet safely.

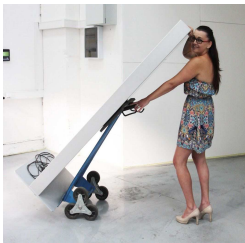

Transport using a trolley

- Transport the totem with the glass side facing towards the trolley frame.
- Place soft packaging material between the totem and the trolley frame to protect glass from being scratched or marked.

Cleansing

Use alcohol based, non-abrasive cleansing fluid with soft lint free cloth for:

- Front glass panel
- Anodised (EV-1) aluminium side profiles and mounting bars
- Powder coated steel rear panel
- Powder coated steel base plate.

In order to clean fans:

- Open the totem and remove the screen on the screen bracket.
- Lift the ventilation cover up (it just clips in). Remove the filter.
- Wash the filter in warm soapy water.
- Place the filter back inside and clip on the ventilation cover.
- Place the screen on the screen bracket within the totem and insert and lock the rear panel as instructions above.

Screen De/Installation

Preparation

- 2 persons are required to ensure safe handling.
- Tools required: Allen key and Pozitiv screwdriver.
- Obtain 4 x VESA screws for the screens in question, typically M6 or M8 with length varying between 16-25mm. Washers can be added if needed. We recommend Hex head machines screws.
- Don't forget to obtain necessary cables such as HDMI or network cable.
- Ensure that power and network sockets dedicated for the totem will be ready at the place of installation.
- If installation is at elevated height please ensure a suitable assembly platform or step ladder is provided as screens are heavy.



Eject the lock levers

- Unlock the cylinder locks with keys provided.
- Eject the lock levers by pressing the lock inwards.



Removing the rear panel

- Lean the rear panel out from the top using the levers.
- Lift the rear panel upwards to remove it from the taps in the totem construction.
- Place the rear panel safely to one side.



Remove the screen mounting bracket

- Loose 8 screws holding the screen bracket into the hooks on the totem frame.
- Remove the screen bracket by lifting it upwards out of the hooks on the totem frame.



Mount the screen to screen bracket

- Place the screen face down on a soft and clear surface.
- Mount the screen bracket to the rear of the screen.
- Adjust the position of the screen to the center of the bracket (suitable for screens with asymmetric VESA fixing points e.g. for some Samsung models).



Place the screen within the totem

- Insert the screen bracket with screen by lowering it into the hooks on each side of the totem frame.
- Tighten all 8 screws which hold the screen bracket in the hooks on the totem frame.



Adjust the distance between the glass panel and the screen

- You can adjust the position of the screen both forward and backward by adjusting the hooks for the screen bracket..
- The recommended distance is circa 1cm.
- You must remove the screen bracket with screen to adjust the position of hooks.

Connect the accessory

- Connect all electronic devices inside:
 - Screen, fans, player etc. to electric socket inside totem
 - Player to screen via HDMI cable
 - Network cable inside totem to player or screen
 - Touch foil controller to player via USB
 - Other additional devices like cameras, GSM modems etc.
- Connect the totem to the power supply and to the computer network.



Insert and lock the rear panel

- Place the bottom edge of the rear panel into the taps in the main totem construction.
- Ensure the rear panel is vertical, push the levers down to secure it in place checking the levers are engaged correctly. Lock using keys provided to prevent unauthorized access.