

# Slim Digital Totem Display Instructions

## Transportation



### Removing from pallet

- It is recommended to remove the totem from the pallet by a minimum of TWO persons, holding the totem at both sides, tilting it in alternate directions to walk it off the pallet safely.



### Transport using a trolley

- Transport the totem with the glass side facing towards the trolley frame.
- Place soft packaging material between the totem and the trolley frame to protect glass from being scratched or marked.

## Cleansing

Use alcohol based, non-abrasive cleansing fluid with soft lint free cloth for:

- Front glass panel
- Anodised (EV-1) aluminium side profiles and mounting bars
- Powder coated steel rear panel
- Powder coated steel base plate.

In order to clean fans:

- Open the totem and remove the screen on the screen bracket.
- Lift the ventilation cover up (it just clips in). Remove the filter.
- Wash the filter in warm soapy water.
- Place the filter back inside and clip on the ventilation cover.
- Place the screen on the screen bracket within the totem and insert and lock the rear panel as instructions above.

## Screen De/Installation

### Preparation

- 2 persons are required to ensure safe handling.
- Tools required: Allen key and Pozitiv screwdriver.
- Obtain 4 x VESA screws for the screens in question, typically M6 or M8 with length varying between 16-25mm. Washers can be added if needed. We recommend Hex head machines screws.
- Don't forget to obtain necessary cables such as HDMI or network cable.
- Ensure that power and network sockets dedicated for the totem will be ready at the place of installation.
- If installation is at elevated height please ensure a suitable assembly platform or step ladder is provided as screens are heavy.



### Eject the lock levers

- Unlock the cylinder locks with keys provided.
- Eject the lock levers by pressing the lock inwards.



### Removing the rear panel

- Lean the rear panel out from the top using the levers.
- Lift the rear panel upwards to remove it from the taps in the totem construction.
- Place the rear panel safely to one side.



### Remove the screen mounting bracket

- Loose 8 screws holding the screen bracket into the hooks on the totem frame.
- Remove the screen bracket by lifting it upwards out of the hooks on the totem frame.




### Mount the screen to screen bracket

- Place the screen face down on a soft and clear surface.
- Mount the screen bracket to the rear of the screen.
- Adjust the position of the screen to the center of the bracket (suitable for screens with asymmetric VESA fixing points e.g. for some Samsung models).



#### Place the screen within the totem

- Insert the screen bracket with screen by lowering it into the hooks on each side of the totem frame.
- Tighten all 8 screws which hold the screen bracket in the hooks on the totem frame.

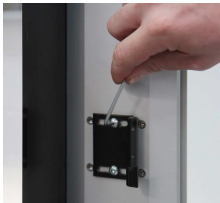

#### Adjust the distance between the glass panel and the screen

- You can adjust the position of the screen both forward and backward by adjusting the hooks for the screen bracket..
- The recommended distance is circa 1cm.
- You must remove the screen bracket with screen to adjust the position of hooks.

#### Connect the accessory

- Connect all electronic devices inside:
  - Screen, fans, player etc. to electric socket inside totem
  - Player to screen via HDMI cable
  - Network cable inside totem to player or screen
  - Touch foil controller to player via USB
  - Other additional devices like cameras, GSM modems etc.
- Connect the totem to the power supply and to the computer network.



#### Insert and lock the rear panel

- Place the bottom edge of the rear panel into the taps in the main totem construction.
- Ensure the rear panel is vertical, push the levers down to secure it in place checking the levers are engaged correctly. Lock using keys provided to prevent unauthorized access.