


Partition Kits

INSTRUCTION SHEET For square or round posts

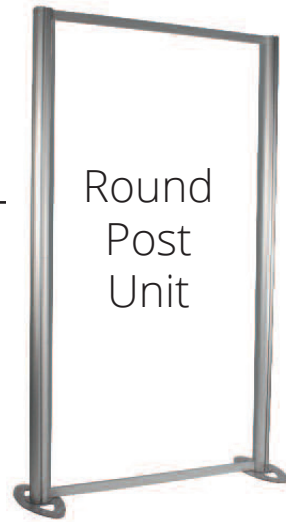


Attach horizontal beams to the vertical frame sides. Tighten locks using a 5mm allen key. If using rigid infill graphics, slide these in to position before tightening beams.



To attach the PVC wing simply click the PVC wing into the channel on the linear until fully secure

Important: Once frame is complete apply steel tape around the frame and PVC extrusion

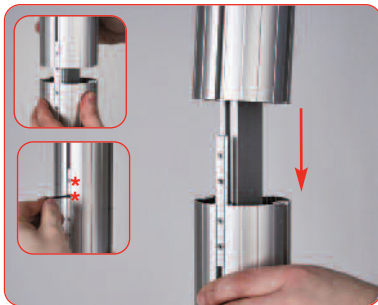

Align and slide female post over male post, tighten both grub screws using a 2mm allen key. Repeat step for 2nd post.



Attach base to male post using M10 bolt and allen key. Ensure clear washer is between base & post. Repeat step for 2nd post.



To attach the graphic simply apply mag tape to the graphic and align the graphic with the frame