

Assembly Instructions

Merchant Outdoor Display Counter assembly



Kit includes: 4 x poles, 4 x screws, 1 x top, 1 x base, 1 x PVC tambour wrap and carry bag.



Take the base with the plug hole and fill with water or sand weighting agent. **Important:** make sure the ridge of the bung is on the outside



Screw fasten male pole onto female pole. Repeat for remaining poles.




Fit pole assembly through hole in the base and push one of the screws through from the opposite side. Ensure the pole and screw are securely fastened together.



Repeat step 3 for the other pole and then place the base on the floor.



Take the tambour wrap and insert the bottom edge into the grooved guide on the base. Ensure the tambour is fitting securely into the groove.

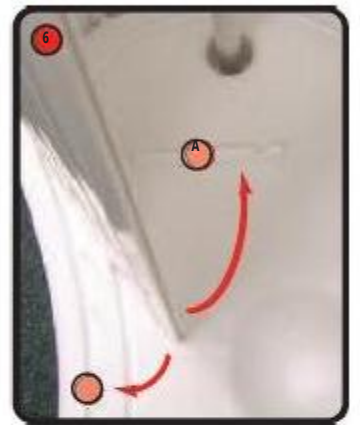

The end of the tambour wrap can slot into groove A for a knee hole open style counter or groove B for full wrap style counter.



Kneehole style counter



Full wrap style counter



Take the top and align the holes over the poles.



Slot the screw through the top into the pole and secure.